


Installation Instructions Honeycomb Shades

Continuous Cordloop & Cordloop TD & Cordloop
Day & Night & SmartRelease Cordloop

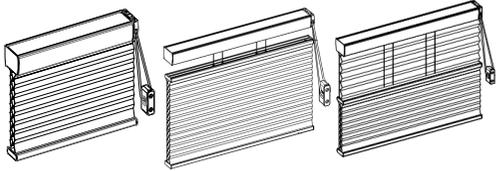

Getting Started

Remove shade from package. Save packaging until shade is installed and working to your satisfaction.




Tools:

- Power drill
- Tape measure
- Screwdriver
- Level
- Pencil

Installation Screws

Surface	Fastener
Wood	#8 1 1/4" Screws (Provided)
	M4x48mm screws
	#6 3/4" screws
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provide)
Metal	Sheet Metal Screws (Not Provide)

Check Component/Hardware:

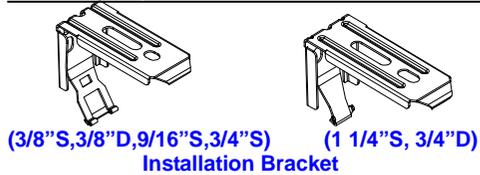

Hold Down Brackets
(Optional)


Hardware Standard Quantity

Order Width (X)	X ≤ 39"	39" < X ≤ 66"	66" < X ≤ 93"	93" < X ≤ 120"
Installation Bracket	2	3	4	5
M4x48mm Screw for Tensioner	2	2	2	2
1 1/4" Screw for Installation Bracket	4	6	8	10
3/4" Screw for Hold Down Bracket (Optional)	4	4	4	4
2" Screw for Installation Bracket with spacer block (Optional)	4	6	8	10
Hold Down Bracket (Optional)	2	2	2	2
Spacer Block (Optional)	1pc for extend distance 10mm 2pcs for extend distance 18mm			

Note: Optional flat head screw included. Use as needed.


Step 1: Bracket Installation

Measure 3" from both ends of the head rail. Mark bracket location on the mounting surface.

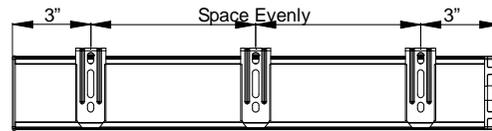


Inside Mount

Use two #8 1 1/4" mounting screws to secure brackets. Use wall anchors for drywall or plaster wall.

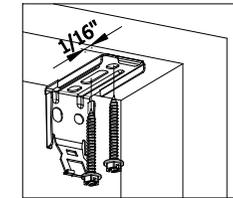


For 3/8" S, 3/8" D, 9/16" S, 3/4" S, allocate a min. distance of 1/16" from wall to the front of brackets as left drawing.

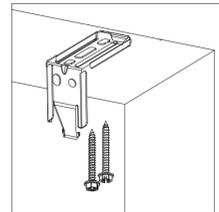


For 1 1/4" S, 3/4" D, align the front of brackets to the edge of window opening as right drawing.

Outside Mount

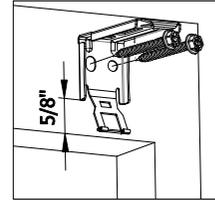


For 3/8" S, 3/8" D, 9/16" S, 3/4" S, allocate a min. distance of 5/8" from wall to the bottom of brackets as left drawing.

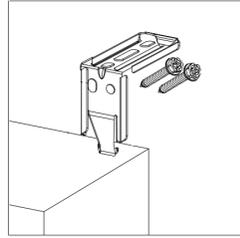

For 1 1/4" S, 3/4" D, align the end of brackets with the top window frame as left drawing.

Use two #8 1 1/4" mounting screws to attach each bracket. Use wall anchors for drywall or plaster wall.



* For shallow mounting, using flat head screw to secure the bracket in 45°.

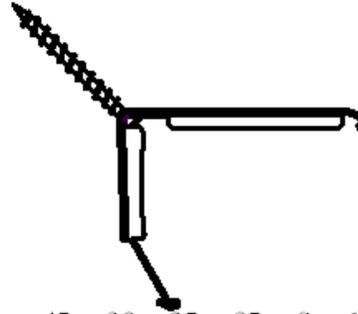

Step 2: Shade Installation


Position head rail at an angle so that it is hooked to the front of the bracket. Then push it upward to snap into the bracket.

For proper installation, start with attaching the front rail to the bracket.

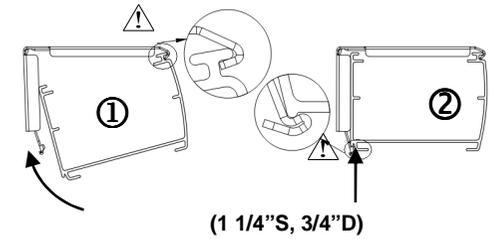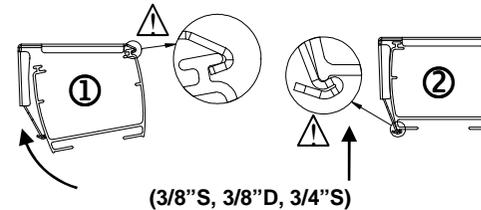

Step 3: Cord Tensioner Installation

- Make sure the cord is tightened / taut without stretching, twisting or crossing, and the tensioner and control cord does not interfere with raising or lowering the shade before cord tensioner is mounted.
- But for **SmartRelease Cordloop** only, the control cord cannot be too tightened / taut when installing due to its own system character.
- Use 2pcs M4x48mm screws to mount the cord tensioner to the wall or window frame firmly for both inside & outside mount. Please refer to the following steps:

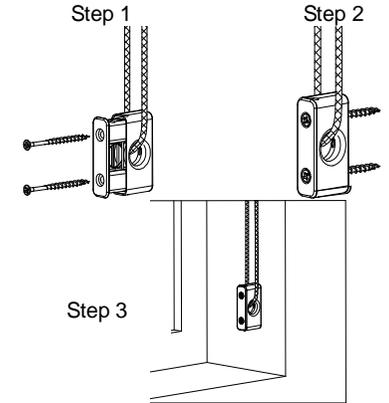


★ Congratulations! You have finished installing the blind.

How to Install Hold Down Brackets (optional)


A, For Hold Down Bracket.

- Use #6 3/4" screw to secure each bracket.

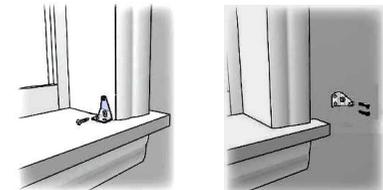


B. For Magnetic Hold Down

Use M3x15mm screw to secure the magnet catch at the below location. Make sure the magnet catch align with the pre-installed magnet on shade bottom rail.

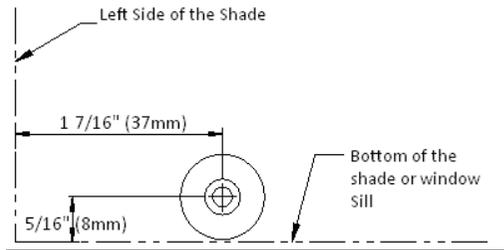


Shade Operation


● **For Cordloop**, Pull cord to operate shade. Cord Tensioner must be fully tightened prior to operating the shade.

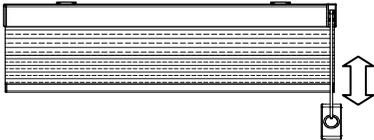


● **For Cordloop TD & Cordloop Day & Night**, Cord Tensioner must be fully tightened prior to operating the shade. Original status is as below picture.

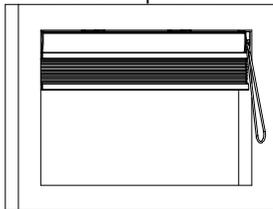


Pull the control cord as the arrow direction in below picture. The middle rail & bottom rail will go down together as below.

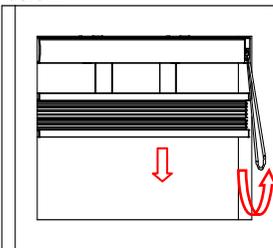


Go on pull the control cord as arrow direction, the bottom rail will stop once reach the bottom, but the middle rail will go up to the top.

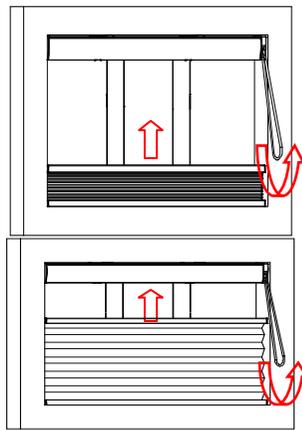



The middle rail will stop when meet with the head rail.

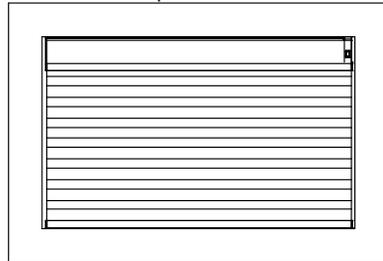


Pull the control cord as below arrow direction, the middle rail will go down.

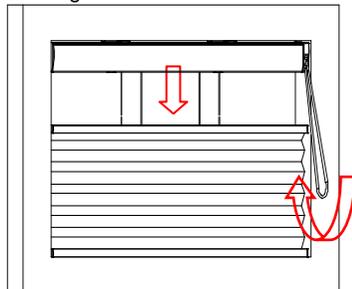


Go on pull the control cord as below arrow direction, once the middle rail reach the bottom, the middle rail & bottom rail will go up together.

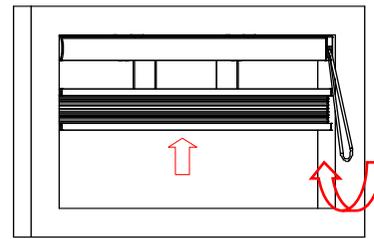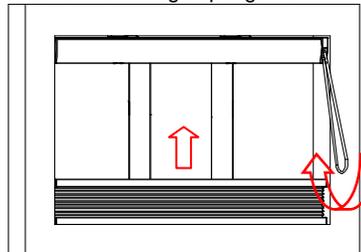


The middle rail & bottom rail will stop once meet the head rail.

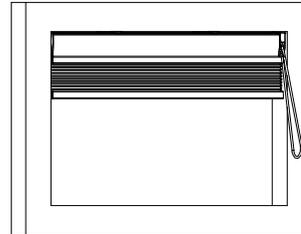

● **For SmartRelease Cordloop**, Cord Tensioner must be fully tightened prior to operating the shade. Pull the front control cord to let the shade go up.

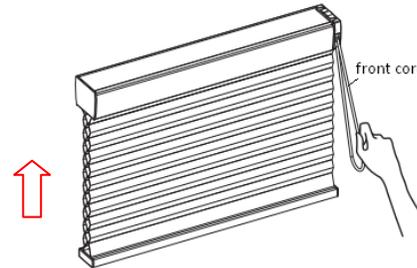



Pull the back control cord, the shade will go down automatically, till it fully close. If want to stop the shade go down, only need to pull the front control cord a little.

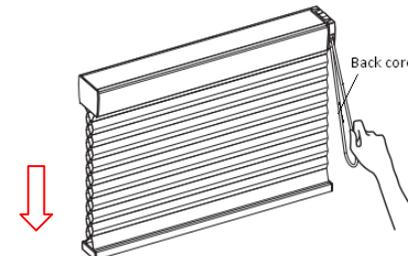

Note: the control cord cannot be too tightened / taut when installing due to its own system character. There should be no obstruction when the shade going down. Please do not play the bottom rail and control cord which may harm the shade.

Remove the Shade

- Fully raise the shade.
- Gently pry the bracket off the head rail with a flat screwdriver.
- Remove the shade.

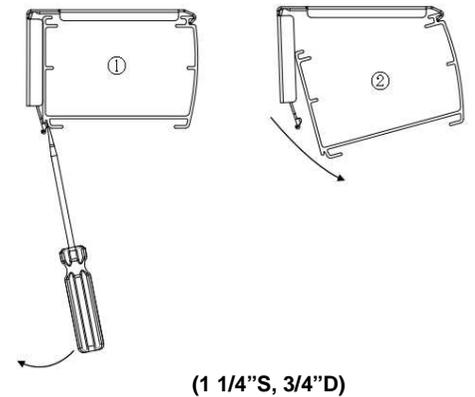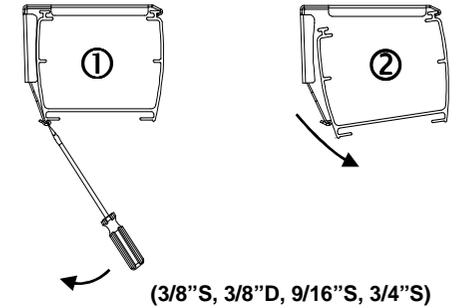

Note

- Keep away from heat, sparks and open flame.
- Larger windows may require two people to install.
- Proper In the process of installation, must support the shade firmly to avoid it fall down too quick to damage the people or itself.
- Operate shade only by pulling the cord.
- To ensure child safety, install cord cleat and tighten up any loose cords after the shade is installed

Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!)

